


INSTRUCTIONS FOR INSTALLING "C" FOG LIGHT BRACKETS  
ON TOP OF APRONS ON 1941 CARS

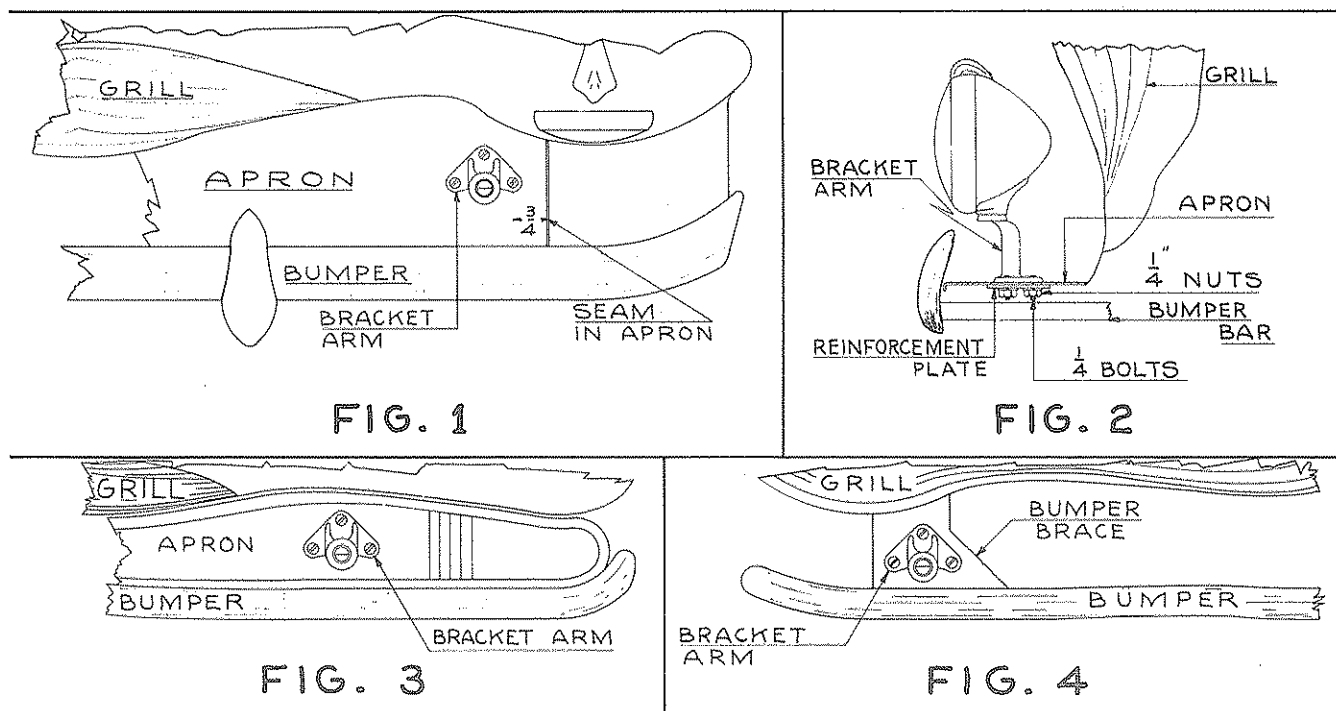

1. The illustrations, (Fig. 1) show top elevation of Oldsmobile and Cadillac; (Fig. 2) shows side elevation of mounting assembly; (Fig. 3) shows top elevation of optional cars as Dodge, Chrysler, etc. (Fig. 4) shows top elevation of Dodge Truck.

2. (A) On Oldsmobile & Cadillac, spot and drill three  $9/32$ " holes with center of outside hole  $3/4$ " from seam of apron, locating holes inside of seam (Fig. 1)

(B) On optional cars, such as Dodge, Chrysler cars and trucks where pan has sufficient strength, place bracket on level part of apron. If pairs are installed, set center of lamps apart at distance of not less than 20 inches and with clear view of lighted beam (Fig. 3) spot and drill three  $9/32$ " holes.

(C) Dodge Trucks are mounted on bumper brace without reinforcement plate, (Fig. 4) by spotting and drilling three  $9/32$ " holes.

3. Place bracket over holes, holding reinforcing plate under apron in line with holes. Insert the three screws supplied and lock assembly in place with lock washers and nuts provided.

4. Where pair of lamps are being installed, perform same operations on other side.

5. Complete wiring and focusing of lamps in accordance with instructions in separate instruction sheet.

