


INSTRUCTIONS FOR INSTALLING "E" FOG LIGHT BRACKETS
ON 1941 STUDEBAKER COMMANDER & PRESIDENT.

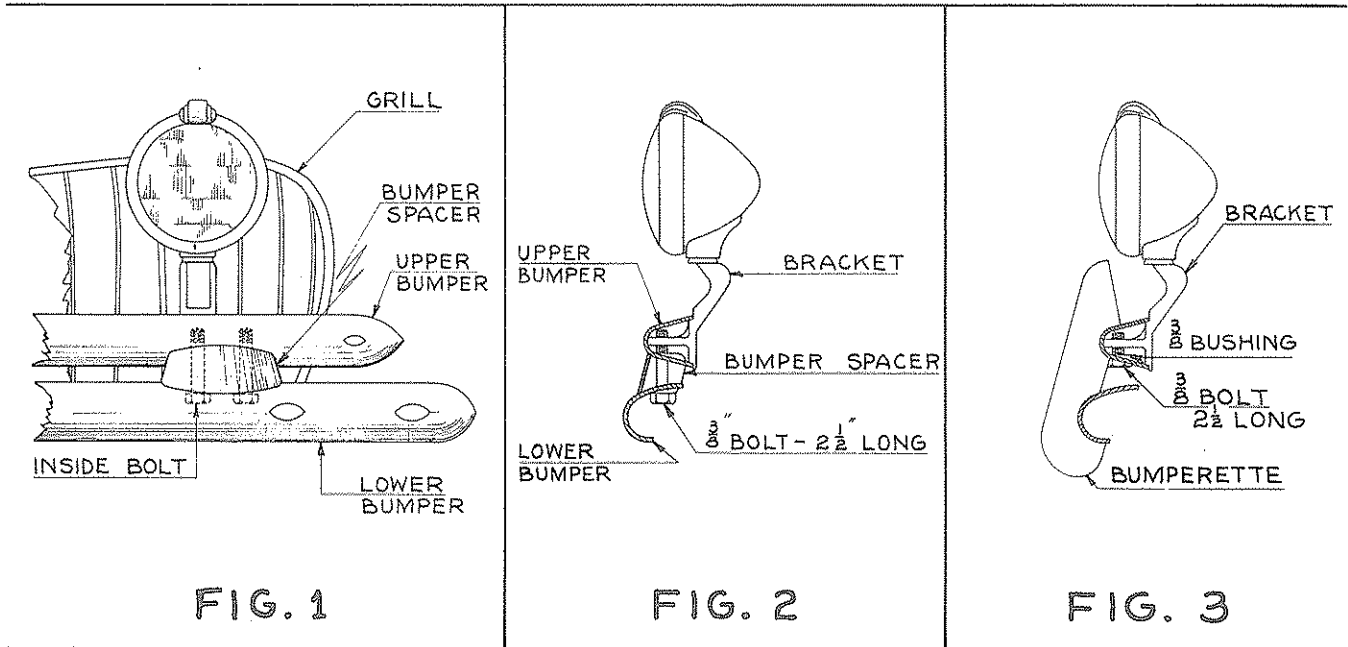

1. Figures 1 & 2 show front and side elevations, respectively, of installation without bumperette. Figure 3 shows side elevation with bumperette as extra equipment.

2. Remove inside bolt toward center of car that holds upper bumper in place. (Fig. 1)

3. Place road lamp bracket inside of upper bumper with tapped hole over and in line with $\frac{3}{8}$ " hole. (Fig. 2)

4. Replace $\frac{3}{8}$ " bolt $2\frac{1}{2}$ " long by screwing into tapped hole in bracket.

5. Where pair of lamps is being installed, perform same operation on other side of bumper.

6. If bumperette, as extra equipment, is installed, follow same instructions but use $\frac{3}{8}$ " bolt $\frac{7}{8}$ " long, and $\frac{3}{8}$ " bushing provided, in place of $\frac{3}{8}$ " bolt $2\frac{1}{2}$ " long, as in Figure 3.

7. Complete wiring and setting of lamps in accordance with instructions in enclosed sheet.

