


# INSTRUCTIONS FOR INSTALLING F8 FOG LIGHT BRACKET ON 1949 FORD

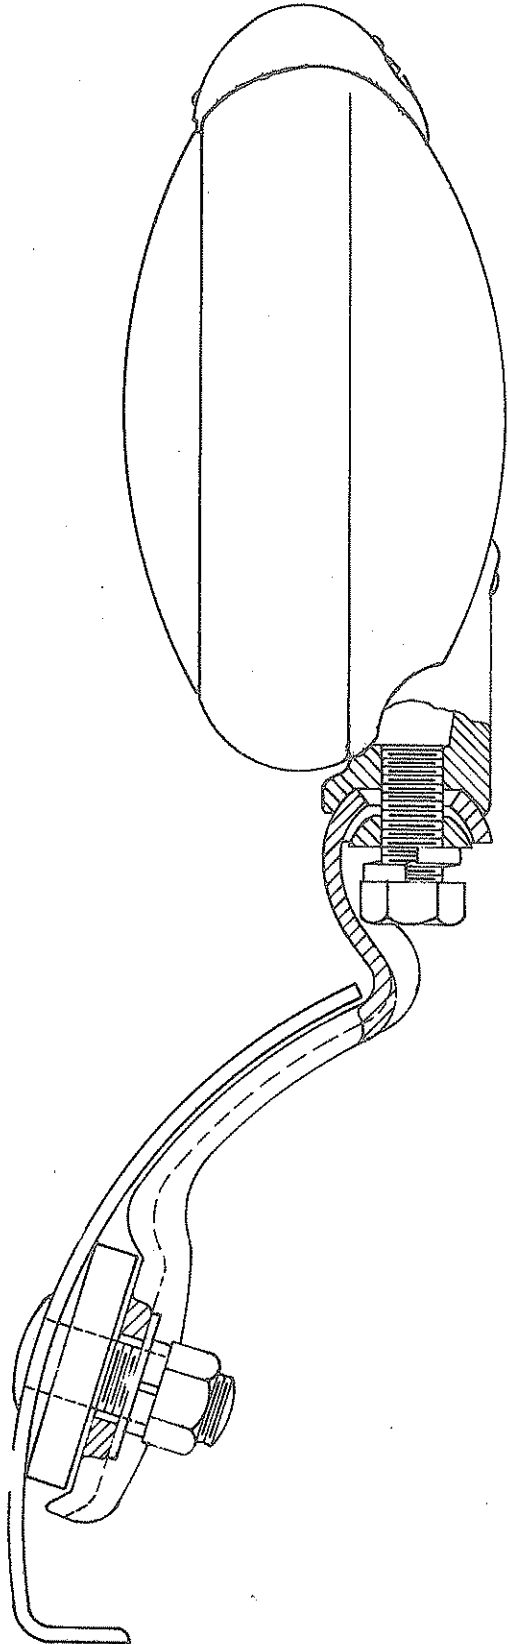

1. Remove nut and lockwasher from bolt (second from either end of bumper) that attaches bumper to bumper support arm.
2. Place fog light bracket over the bolt and replace nut and lock washer. See illustration.
3. Attach fog lamps to brackets and complete installation in accordance with the Form 145 instruction sheet included with lights.

---

**UNITY MANUFACTURING CO.**  
2909 South Indiana Avenue  
Chicago 16, Illinois

# INSTRUCTIONS FOR INSTALLING

## FB FOR LIGHT BACKET

### ON 1949 FORD

1. Remove the old light bucket from the vehicle.

2. Position the new light bucket in the desired location.

3. Secure the light bucket to the vehicle using the provided hardware.

4. Connect the wiring to the vehicle's electrical system.

