

Instructions for installing "G" and "O2" Unity Fog Lamp Brackets

"G" BRACKET

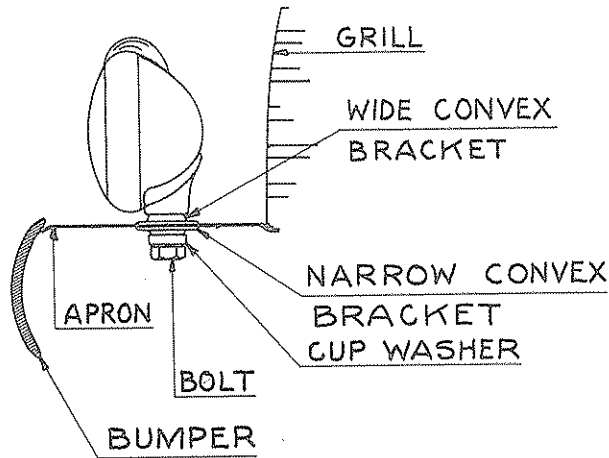


FIG. 1

"O2" BRACKET

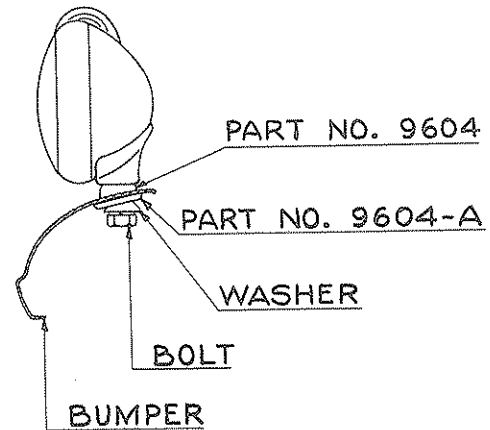


FIG. 2

1. Center punch apron at same spot on right and left side and drill $\frac{1}{2}$ " holes, being sure to set hole position far enough forward for lamp shell to clear grill. (Fig. 1).
2. Place wide convex bracket on top of apron over $\frac{1}{2}$ " hole; place narrow convex bracket under apron; place cup washer below narrow convex bracket; place lock washer over bolt; insert bolt through the above parts and screw into the lamp shell bracket. (Fig. 1).
3. Complete wiring and focusing of lamps in accordance with instructions (Form 145) enclosed in lamp carton.

1. Place part 9604 over slot in bumper (Fig. 2); place part 9604A under this slot; place cup washer below part 9604A.
2. Place lock washer over bolt, insert bolt through above parts and screw into lamp shell bracket. (Fig. 2).
3. Complete wiring and focusing of lamps in accordance with instructions (Form 145) enclosed in lamp carton.

UNITY MANUFACTURING CO.

2909 INDIANA AVENUE • CHICAGO, ILL.

