

Instructions for installing "D1" and "H" Fog Light Brackets on 1942 Dodge

D-1 DODGE PASSENGER


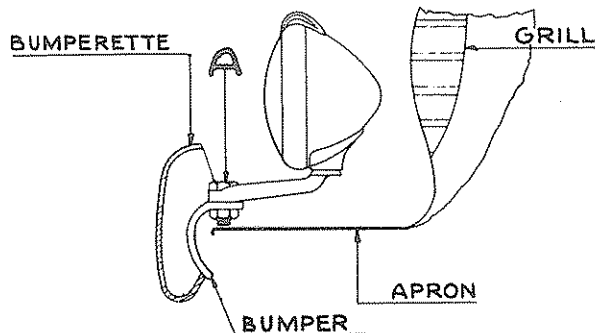


FIG. 1

H-DODGE COMMERCIAL

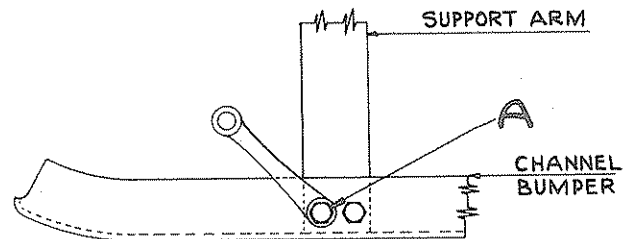

TOP VIEW

FIG. 2

1. Remove bolt and nut which attaches bumperette to bumper bar at point "A"—Figure 1.
2. Place bracket arm over hole and insert $\frac{7}{16}$ " carriage bolt furnished through bracket, bumperette and bumper and bolt together with $\frac{7}{16}$ " lock washer and nut furnished. Swing the fog lamp bracket arms toward outside of car.
3. Attach lamp heads to brackets and complete wiring and focusing of lamps in accordance with instructions (Form 145) enclosed in lamp carton.

1. Remove outside bolt and nut from upper flange of channel bumper bar at point "A", figure 2. (Right end of bumper is illustrated.)
2. Place bracket arm over the hole and insert the $\frac{7}{16}$ " carriage bolt furnished and fasten with $\frac{7}{16}$ " lock washer and nut furnished, swinging bracket toward outside of truck, as illustrated.
3. Attach lamp heads to brackets and complete wiring and focusing of lamps in accordance with instructions (Form 145) enclosed in lamp carton.

UNITY MANUFACTURING CO.

2909 INDIANA AVENUE • CHICAGO, ILL.

