
Instructions For Installing "N6" Fog Light Brackets on 1946 Nash

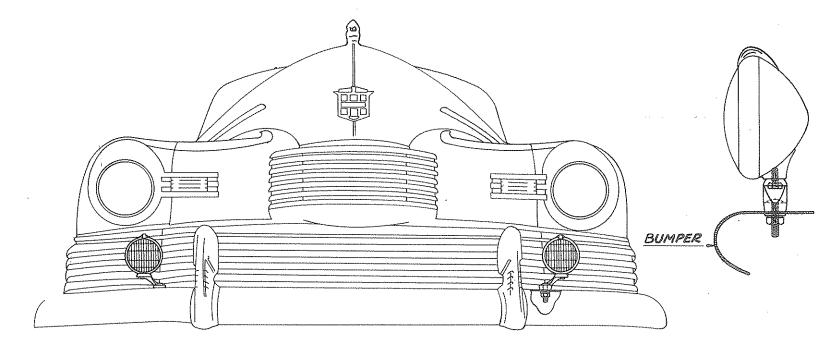

- 1. Lay template, Form B-79, on bumper as indicated on template.
- 2. Spot and drill 7/16" holes as indicated on template.
- 3. Attach brackets as shown in illustration above.
- 4. Complete installation of lights as set forth in instruction sheet, Form 145.
- 5. The Fog Light Switch should be attached as set forth in instruction sheet, Form 180.

Unity Manufacturing Company

2909 S. INDIANA AVENUE

CHICAGO 16, ILLINOIS